
Calibration of Temperature Sensor



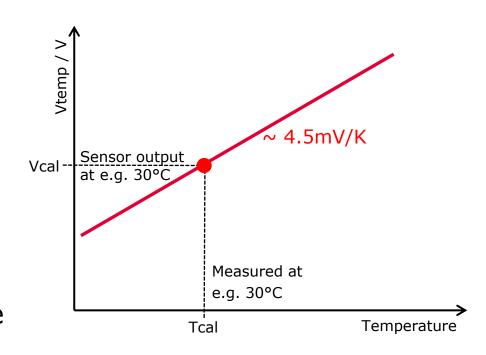

How to calibrate the temperature sensor

- Measure sensor output at known temperature
- Use this value pair (Vcal, Tcal) as a fix point
- Extrapolate a line through this point with a gradient of 4.5mV/K
- This will be the reference curve for the particular device
- In order to get a +/-15K accuracy of the sensor, the uncertainty of Tcal has to be below +/-6K





Part of your life. Part of tomorrow.

